ACTIVE VENTILATION PRODUCTS INC.
Manufacturers of GREEN Products
PROUDLY MADE IN THE USA
Over 50% of our products use recycled aluminum
845-565-7770 • Fax: 845-562-8963 • www.roofvents.com • roofvent@aol.com

UV-48 Universal Vent Installation Instructions

To properly install this Universal Dormer Vent, please follow these instructions.

1) When used as a Roof Exhaust Vent, cut a 1.5" x 46" slot just below the first row of shingles using the following chart. (See View 1). When used as a Roof Intake Vent, cut the slot 1 foot up from the bottom edge of the roof, from there installation instructions are the same.

   Please note: if more than one Universal Vent is being installed, then the VENTS (not the slots) must be spaced 4 inches apart when installed, to allow for roof water drainage.

2) Apply sealant under the top flange and along the side edges (See View 2). Then place the top flange under the shingles placing it so that the slot is centered under the Universal Vent. Be sure the Vent is correctly aligned with the slot before continuing. (See View 3)

3) When the Universal Vent is in its final position, the bottom flange should rest on top of the shingles to ensure correct drainage. Do not use sealant on the bottom flange. (See View 2)

4) Attach the Universal Vent to the roof using (#8 x 1") screws on the bottom flange, 6 " apart. (See View 4)

View 1 - Cut a slot below the bottom edge of the first row of shingles for exhaust. For intake cut slot 1 foot up from the bottom edge of roof.

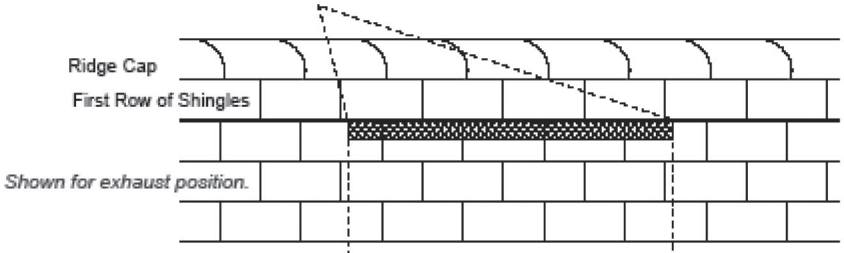

View 2 - Put sealant across the top flange underneath the Dormer Vent as indicated.

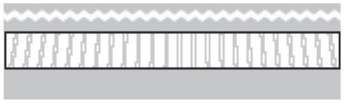

View 3 - Center Universal Vent over the slot, with the top flange under the first row of shingles and the bottom flange resting on top of the shingles.

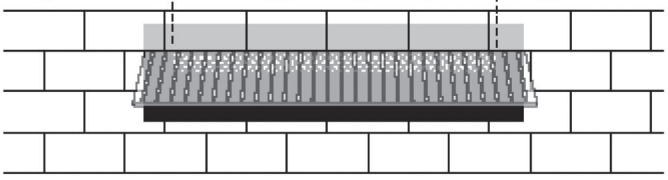

View 4 - Completed installation should look like this.